

PROCESS, KEEP AND ENJOY

# Secret Smoke

## Instruction Manual SSPRE6



## Package content

1. SSPRE6 Machine X 1
2. US Plug X 1
3. Metal foot stool X 2
4. Foot stool screws X 4
5. Fastening nut X 1
6. Instruction Manual X 1



Heating plate

Heating plate

Hand spike

Controller panel

Pressure release

Timer



Power Button

Overload Break

Plug

## Steps

1. Open the box,take out of the machine.Install the foots by the fastening tools.
- 2.Plug into the Machine,turn on the power button.


### A, Know the panel

the upper controller is 'InP',down controller is ';',After 2 seconds,Upper controller is Max value,down controller is Min Value.Another 2 seconds later,Upper controller is the value you want to reach,the down controller is the value is the now true value.




### B, Temperature Setting

Press the SET key,Upper is 'SH',Press **▲** to Increase the temperature to what will you set for or **▼** to Decrease the temperature what will you set for,Press 'SET' to 'ST'

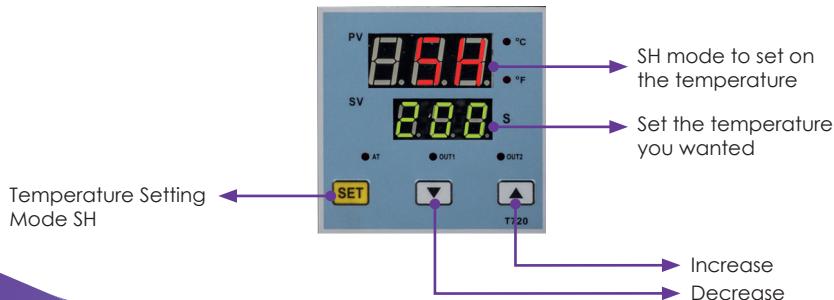

### C. Set the Time

Press SET, Upper controller is 'ST', Press **▲** to Increase the temperature to what will you set for or **▼** to Decrease the temperature what will you set for, Press 'SET' to 'ST'

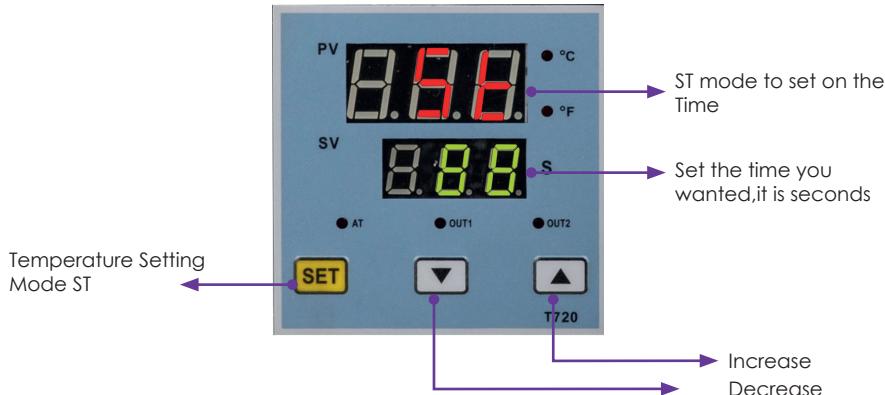

### D. Fahrenheit to Celsius

Press the **▲** and **▼** at the same time, Upper frame is 'LK', Down frame set to '88', Press SET, Upper frame is 'CF', Downframe is '0' ---Celsius, '1'--- Fahrenheit




'LK'—'88'




'CF', '0'---Celsius, '1'---Fahrenheit

## E. Temperature Range Setting


Press the ▲ and ▼ the same time,Upper frams is 'LK', Down frame set to '88', Press SET,Upper frame Is 'rL',down frame is '0',then Press SET,Upper frame is 'rH',Down frame is the temperature range you are going to set.

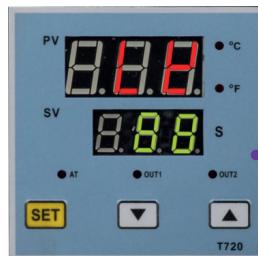

'LK'—'88'

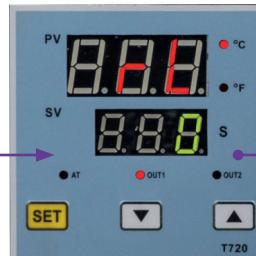

'rL'—'0'

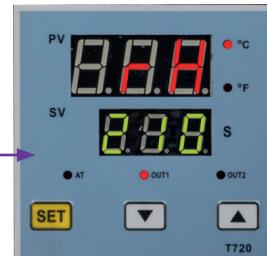

'rL'—'temperature range'

## NOTES

1.'SET' Key is pressed for control mode,every time you pressed SET 4 seconds,the upper frame will come out the prompt,Press ▲ or ▼,set the down frame the value you need,If no key was pressed in 1 minutes,the controller will be back to standard mode!.

2.Controller Prompt Parameter self-setting, Press ▲ 20 seconds,Upper Frame show AT,The controller is self-setting,the temperature will roll over 1-2 times,then the self-setting is finished, AT light be off,The controller will be controller by new prompt parameter, and be saved forever.



AT light is Red, self setting

3.If red frame down half is 'ooo',it means the thermocouple connected reversed, If red frame upper half is 'ooo',it means the thermocouple connected is open circuit or the temperature is out of the test range



**Thermocouple connected reversed.**



**thermocouple connected is open circuit or the temperature is out of the test range.**

Model Number:	SSPRE6
Pressure:	Hydraulic pump 5tons
Heat Plates Size:	122mm*71mm*31mm (4.8in*2.8in*1.2in)
Voltage:	110V/220V
Power:	400W
Max. Temp.:	300°C (572°F)
Pressure:	5T
N.W.:	21.5kg,
G.W.:	23.5kg
Product Size:	14*25*43(CM)
Packag Size:	36.5*36.5*49cm,Polywood Box