


# Secret Smoke®

## MANUAL - MINI WASHING MACHINE

### PARTES DE LA LAVADORA

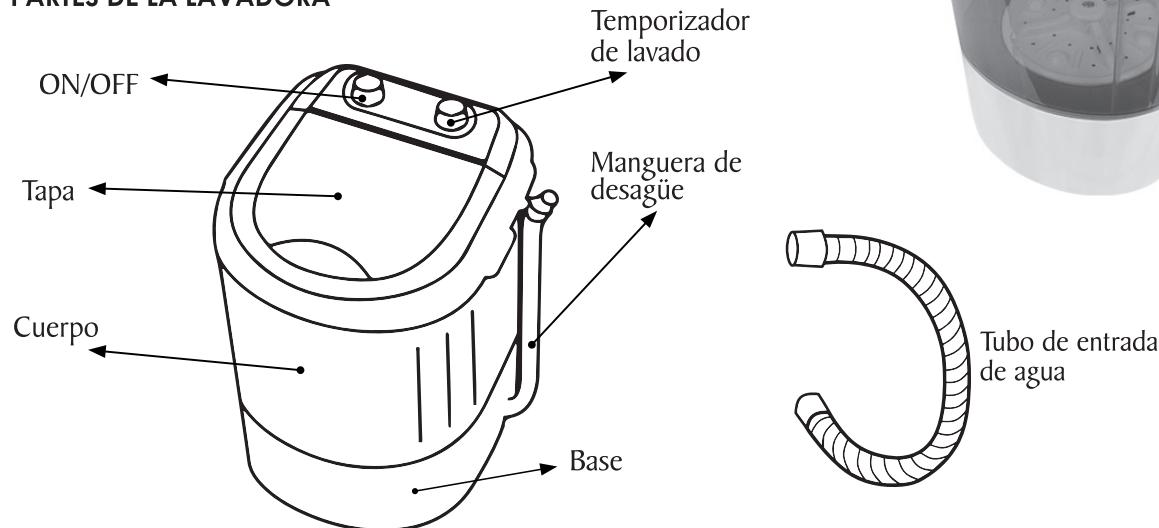

**Lea detenidamente este manual antes de usar el aparato y guárdelo para futuras consultas.**

### CONSEJOS DE SEGURIDAD

No instalar la lavadora en el baño u otro lugar húmedo. La humedad puede causar mal funcionamiento o accidentes.  
No colocar la lavadora en un lugar inclinado o desigual y mantenerla al menos a una distancia de 2 cm de la pared.  
Mantener la lavadora alejada de la exposición al sol.  
No poner agua en el panel de control.  
Mantener a los niños alejados de la lavadora.  
No usar agua a más de 50°C, podría cambiar la forma de las partes de plástico causando mal funcionamiento.  
No colocar alfombras u objetos blandos debajo de la lavadora que puedan bloquear la circulación del aire.  
No poner objetos con llama cerca de la lavadora ni cigarrillos u objetos cortantes sobre la lavadora.

### PRECAUCIONES

Debe conectarse a un enchufe con toma a tierra.  
Usar únicamente enchufes cuya intensidad de corriente eléctrica sea superior a 5 Amp.  
No cortar, retorcer, dañar el cable o colgar cosas pesadas sobre él, para prevenir cortes en la fuente de alimentación.  
No desenchufar la lavadora con las manos húmedas  
Este aparato no debe ser utilizado por personas con falta de experiencia y conocimiento, a menos que sean supervisadas o hayan sido instruidas sobre el uso del artefacto por una persona responsable de su seguridad. Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.  
Si se daña el cable de alimentación, debe ser reemplazado por el fabricante, su agente de servicio o personas calificadas similarmente para evitar peligros.

### ANTES DEL PRIMER USO

Retirar la espuma de la base. Mantenga la salida de ventilación siempre libre.  
Asegurarse de que el tubo de entrada de agua conecta la salida de agua del grifo con la entrada de agua de la lavadora.  
Mantener la manguera de drenaje colgada.


### INSTRUCCIONES DE USO

- 1 - Poner la lavadora en un lugar elevado.
- 2 - Introducir agua y hielo en la lavadora hasta que la temperatura del agua sea cercana a los 4°C.
- 3 - Llenar la bolsa piramidal de malla con la materia a la que se le quiera extraer la resina.
- 4 - Poner en funcionamiento la lavadora (no menos de 10 min.).
- 5 - Una vez terminado el lavado retirar la bolsa piramidal de malla y escurrirla bien sobre la lavadora, de tal modo que caiga dentro de ésta el agua del escurrido.
- 6 - Mediante el tubo de desagüe verter el agua en el cubo, haciéndolo pasar por las bolsas de malla de diferentes medidas respetando siempre el orden indicado.
- 7 - Dejar escurrir bien la materia acumulada en las bolsas de malla, retirarla cuidadosamente y dejarla secar al menos 24 horas.
- 8 - Para alargar la vida de las mallas conviene limpiarlas cuidadosamente después de cada uso.

# Secret Smoke®

## MANUAL - MINI WASHING MACHINE

### PARTS

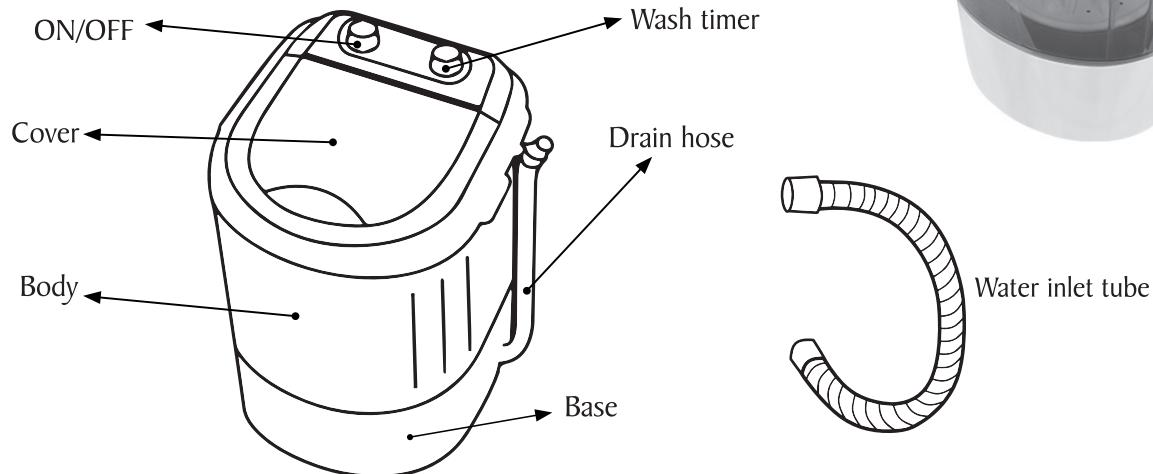

**Read this manual carefully before starting to operate the machine and keep it properly.**

### SAFETY ADVICE

Do not install the washer in the bathroom or any other wet place.  
Do not install the washer on an inclined or bumpy place. Keep it apart from the Wall at least 2 cm.  
Never put hands into the washer while washing.  
Keep washer away from sunny places.  
Do not put water on the control panel.  
Keep children away from the washing machine.  
Do not use water hotter than 50°C. It could change shape of the plastic parts causing malfunction.  
Do not place carpets or soft objects under the washer. Ventilation outlet should be always free.  
Do not place flame objects near the washer, cigarettes or sharp objects on the washer.

### CAUTIONS

Connected washer to a grounded outlet.  
Use only plugs with rated electric current higher than 5 Amp.  
Do not cut, twist, damage the cable or hang heavy things on it, to prevent cuts in the power supply.  
Do not unplug the washer with wet hands.  
This device should not be used by people with lack of experience and knowledge, unless they are supervised or have been instructed on the use of the device by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.  
If power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid hazards.

### BEFORE FIRST USE

Remove the foam from the base. Keep ventilation outlet always free.  
Make sure that the water inlet tube connects the tap outlet with the washer inlet.  
Keep drain hose hang up.

### INSTRUCTIONS FOR USE

1. Put the washing machine in a high place.
2. Put water and ice into the washing machine until the temperature of the water is close to 4 °C.
3. Fill the mesh bag with the material to which the resin is to be extracted.
4. Switch on the washing machine (10 minutes at least).
5. Once the washing is finished, remove the mesh bag and drain it well on the washing machine. Be aware that the drained water falls into the washing machine.
6. Using the drain pipe, pour the water into the bucket. The water should go through the mesh bags of different sizes, always using the indicated order.
7. Drain well the accumulated material in the mesh bags. Then, remove it and let it dry for 24 hours at least.
8. For enlarge the life of the mesh bags, clean them carefully after each use.