

Instruction Manual

ULTRAVIOLET WATER STERILIZER

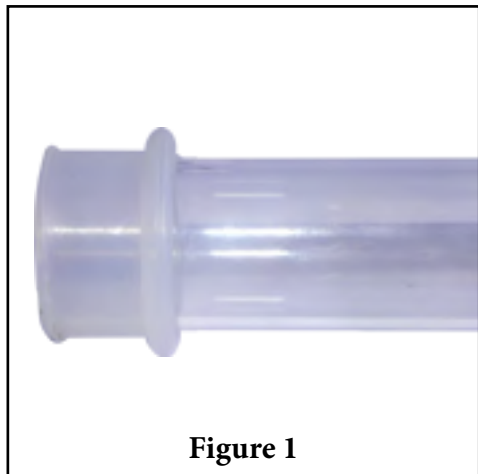


Figure 1

Step 1.
Place The Silicone Stopper or Silicone Seal (Item D or E) at the tip of the Glass Tube (Item B). See figure 1

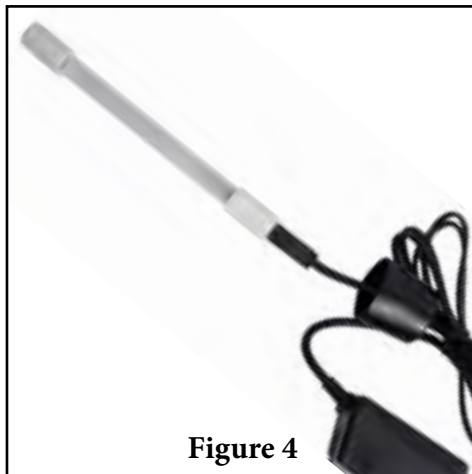


Figure 4

Step 2.
Slide-in the Glass Tube (Item B) into the UV Chamber (Item A). See Figure 2.



Figure 2

Step 3.
Fasten the Aluminum Nut (Item C) to seal the UV Chamber (Item A). See Figure 3.

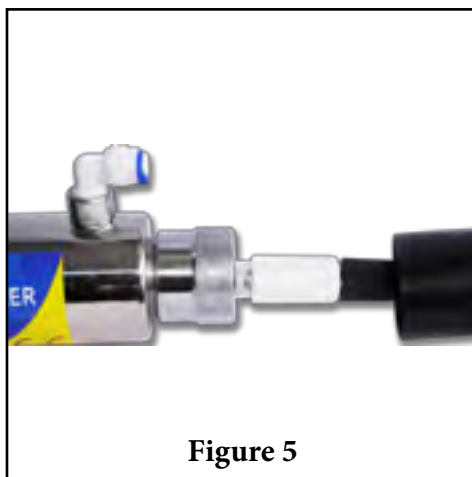


Figure 5

Step 4.
Plug the Adaptor (Item G) to the UV Lamp (Item F). See Figure 4.



Figure 3

Step 5.
Insert the UV Lamp (Item F) in to the UV Chamber (Item A). See Figure 5.

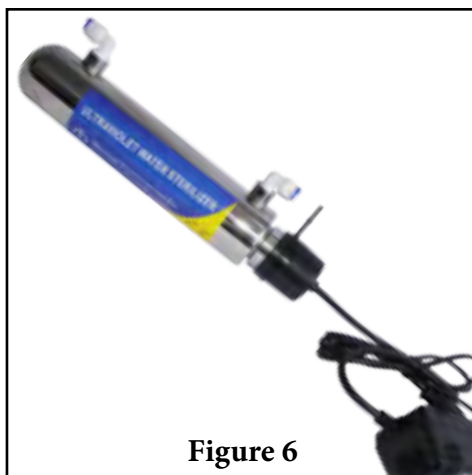


Figure 6

Step 6.
Seal it up with the Rubber Stopper that is already attached to the Adaptor (Item G).

- A. UV CHAMBER
- B. GLASS TUBE
- C. ALUMINUM NUT
- D. SILICONE STOPPER
- E. SILICONE SEAL
- F. UV LAMP
- G. ADAPTOR

A



B



C



D



E



F



G



WARNING! Protect eyes and skin from direct UV radiation.

Don't watch the ultraviolet rays emitting out of the UV lamp without protection, since they will cause serious burn for naked eyes. Unplug the electrical ballast when maintaining the system.

Manual

ESTERILIZADOR DE AGUA POR UV

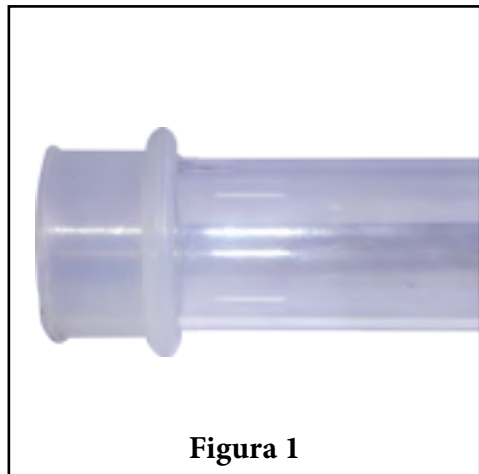


Figura 1

Paso 1.

Coloque el anillo de silicona o el sello de silicona (Artículo D o E) en el extremo del tubo de cristal (Artículo B). Véase la foto 1



Figura 2

Paso 3.

Apriete la tuerca de aluminio (Artículo C) para cerrar la Cámara UV (Artículo A). Ver la foto 3.



Figura 3

Paso 5.

Inserte la luz UV (Artículo F) en la Cámara UV (Artículo A). Véase la foto 5.

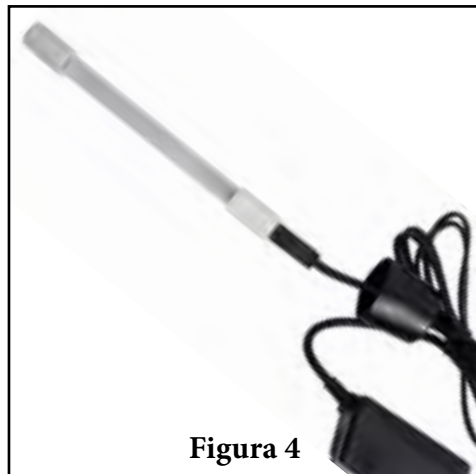


Figura 4

Paso 2.

Deslice el tubo de cristal (Artículo B) en el interior de la Cámara UV (Artículo A). Véase la foto 2.

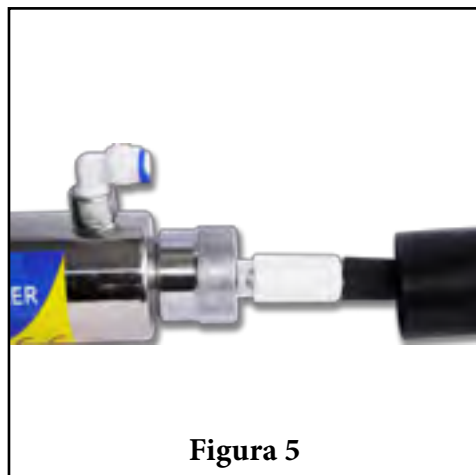


Figura 5

Paso 4.

Conecte el adaptador de alimentación (Artículo G) a la luz UV (Artículo F). Ver la foto 4.



Figura 6

Paso 6.

Sellar con el tapón de goma, un aislante impermeable, que está conectado al adaptador (Artículo G). Véase la foto 6.

- A. CÁMARA UV
- B. TUBO DE CRISTAL
- C. TUERCA DE ALUMINIO
- D. ANILLO DE SILICONA
- E. SELLO DE SILICONA
- F. LUZ UV
- G. ADAPTADOR

A



B



C



D



E



F



G



¡ADVERTENCIA! Proteger los ojos y la piel contra la radiación directa.

No mirar los rayos ultravioletas que emite la lámpara sin protección, ya que podrían causar quemaduras graves a los ojos desnudos. Desenchufe el balastro para el buen mantenimiento del sistema.